


PHONES




MIC



METER

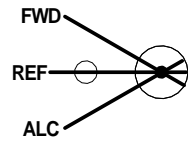







MODE BAND

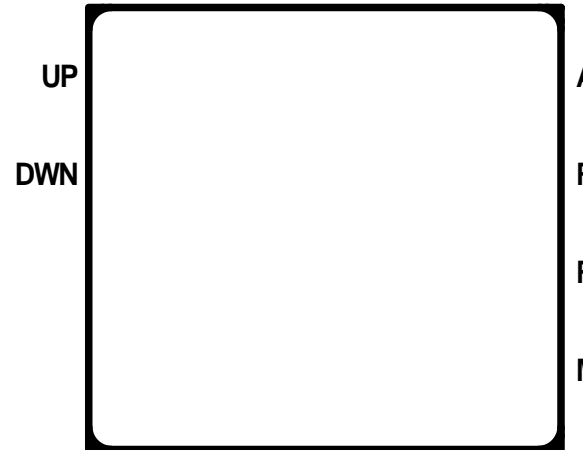

ATT



PRE

NB

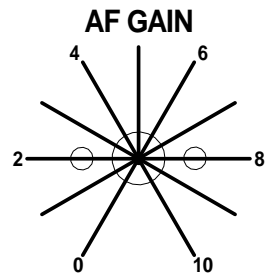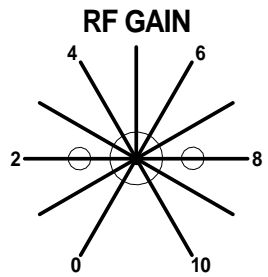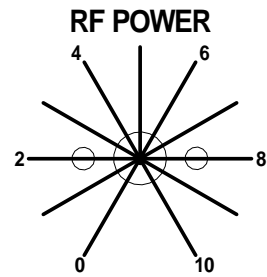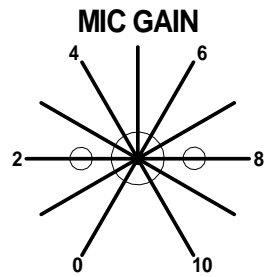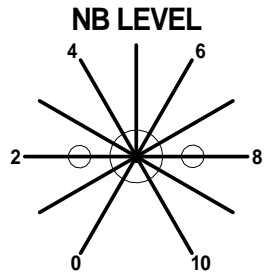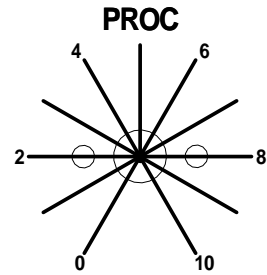

TRANSMIT

PWR

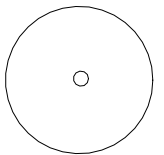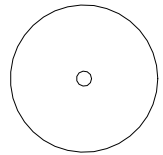

ON

ON